

USER MANUAL

NVP2415 / 2417 / 2419 – S801/S1601

2U 15" / 17" / 19" Rackmount LCD

Keyboard Drawer with USB KVM Switch

Table of Contents

1.	Table of Content	P.1
2.	Read Before Installation	P2
3.	Introduction	P3
4.	Features	P3
5.	Package Contents	P4
6.	Optional Accessories	P5
7.	Peripheral Products	P5
8.	Important Safeguards	P6
9.	Structure Diagram	P7
10.	Dimension Diagram	
	NVP2415-S8/1601	P.8
	NVP2417-S8/1601	P.9
	NVP2419-S8/1601	P.10
10.	LCD Session	
	LCD Membrane Diagram	P.12
	LCD OSD Control	
	Main Menu	P.12
	Sub Menu	P.13-14
	Resolution Settings	
	For Windows	P.15
11.	KVM Session	
	Front View	P. 17
	Rear View	P. 18
	Installation Steps	P.19
	Cascading	P. 20
12.	Start Up	P. 21
	HotKey Command	P. 21
	HotKey Command Operation	P. 22-23
	KVM OSD Operation	
	Main Controls	P. 24
	Sub Controls	P. 25-30
13.	FAQ	P. 31
14.	Technical Specification	P. 32-33

2. Read Before Installation

Technical Notes

For Windows 98/98 SE systems

- HID (Human Interface Device) driver must be installed prior to using the USB KVM switch. To install the HID driver, first connect a USB keyboard and mice directly to computer (before installing KVM switch) then follow the Windows installation instructions, this will install the HID device driver and allow the use of the KVM switch.

Note : Failure to do so may result in Windows not being able to detect keyboard and mouse.

- If a mouse recognition error is displayed during system boot:

"Windows did not detect a mouse attached to the computer. You can safely attach a serial mouse now. To attach a mouse to a PS/2 mouse port, you must first turn the computer off"

a) Press the Tab key once to select the check box.

b) Press the Space bar once which will place a check in the box "Do not show this message again"

c) Press the Enter key once and Windows will continue to boot and will then recognize the mouse.

Operating System Compatibility

- Any USB-enabled operating system such as Windows® 98, Windows® 98SE, Windows® 2000, Windows® XP or higher.
- Windows® 95 are not recommended because of immature USB support.

3. Introduction

NVP Series is a combination of keyboard, mouse and monitor into a drawer, with features such as flip-up design, adjustable brackets, built in LCD OSD to provide effective assistant for an administrator to control PC system.

NVP Series provides cost effective for your limited IT budget over using CRT and rack mounting. Also, it will be space saving for your compact environment rack and effective assistant for an administrator to control PC system.

4. Features

- Unique mechanical design to maximize rack mountable space
- Adjustable mounting brackets from 390 to 790mm (front to rear 19" mounts)
- Two keyboard selections supporting multiple languages
- Three models to choose from 15", 17" or 19" LCD panel
- Front-access lock for security
- Directly compatible with SUN Microsystems resolution 1152 x 900
- Built-in SUN Microsystems Hot Key without any converter
- Slide rails have two fixed positions to prevent movement of the keyboard
- Supplied with 12V 5A remote power adapter (single power source)
- Built-in KVM switch function for easy controlling and monitoring up to 16 residing servers/ platforms
- Support eight characters password protection and search PC server name
- Auto scan mode for monitoring PCs and flexible scan time from 5~99 seconds
- Hot Pluggable—Add or remove computers without powering down the switch
- Easily switch Individual button to select the PC channel using the pushbutton channel selector switches, Hot Keys, or via the On-Screen Display (OSD) Menu

Disclaimer

This information is subject to change without notice. The producer of this manual accepts no responsibility for damage or claims, resulting from misuse or misinterpretation

5. Package Contents

LCD Monitor Drawer with USB KVM Switch	1 Piece
User Manual	1 Piece
DC Power Adapter	1 Piece
Power Cord	1 Piece
Mounting Bracket	1 Pair
Fasteners	4 Pieces
NB-6 2-in-1 KVM cable	8 Pieces

Before Unpacking

It is very important to locate the LCD Keyboard Drawer in a suitable environment.

- The surface for placing and fixing the LCD Keyboard Drawer should be stable and level or mounted into a suitable cabinet.
- Make sure the place has good ventilation, is out of direct sunlight, away from sources of excessive dust, dirt, heat, water, moisture and vibration.
- Convenience for connecting the LCD Keyboard Drawer to the related facilities should be well considers too.

Unpacking

The LCD Keyboard Drawer comes with the standard parts shown as above. Check and make sure they are included and in good condition. If anything is missing, or damage, contact the supplier immediately.

6. Optional Accessories

KVM Cable	
NB-6 / 10 / 15	6ft / 10ft / 15ft USB 3-in-1 cable
Cascade Cable	
????	6ft USB Cascade cable
Others	
	15" - 19" Touchscreen
	Video Input
	24V / 48V DC Power Supply

7. Peripheral Products

Model	Description
NV-S801	8-Port USB KVM switch
NV-S1601	16-Port USB KVM switch
NV-S101	CAT.5 USB KVM extender

8. Important Safeguards

Please read all of these instructions carefully before you use the device.
Save this manual for future reference.


- Unplug the LCD Keyboard Drawer from the power outlet before cleaning.
- Do not spray liquid cleaners or aerosol directly on the device. Wet a cloth with a neutral detergent (e.g. clean water) and squeeze it tight, then clean the screen slightly with it.
- Do not expose the LCD Keyboard Drawer directly to rain, water, moisture or sunlight.
- Avoid pressure on the LCD screen to prevent permanent damage to the display.
- Do not attempt to service the device yourself. Improper operation may void your warranty. Refer all servicing to qualified service personnel.
- Safe storage environment of the LCD Keyboard Drawer is ranging between -20°C and 60°C . Permanent damage could occur if the LCD Keyboard Drawer is stored outside the safe range.
- Unplug the LCD Keyboard Drawer immediately and call qualified service personnel under the following conditions:
 1. If the monitor has been exposed to rain, liquid or water.
 2. If the monitor has been dropped or the casing has been damaged.

What the warranty does not cover

1. Any product, on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a) Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b) Repair or attempted repair by anyone not authorized by us.
 - c) Any damage of the product due to shipment.
 - d) Removal or installation of the product.
 - e) Causes external to the product, such as electric power fluctuation or failure.
 - f) Use of supplies or parts not meeting our specifications.
 - g) Normal wear and tear.
 - h) Any other causes which does not relate to a product defect.
3. Removal, installation, and set-up service charges.


9. Structure Diagram

1. PS/2 keyboard
2. Aluminium front panel
3. Class A active matrix TFT LCD panel
4. Analog to digital signal converter board
5. Rear metal case
6. LCD inverter
7. LCD membrane
8. Ball bearing telescopic slides with stopper
9. Adjustable mounting bracket
10. KVM membrane & KVM switch board

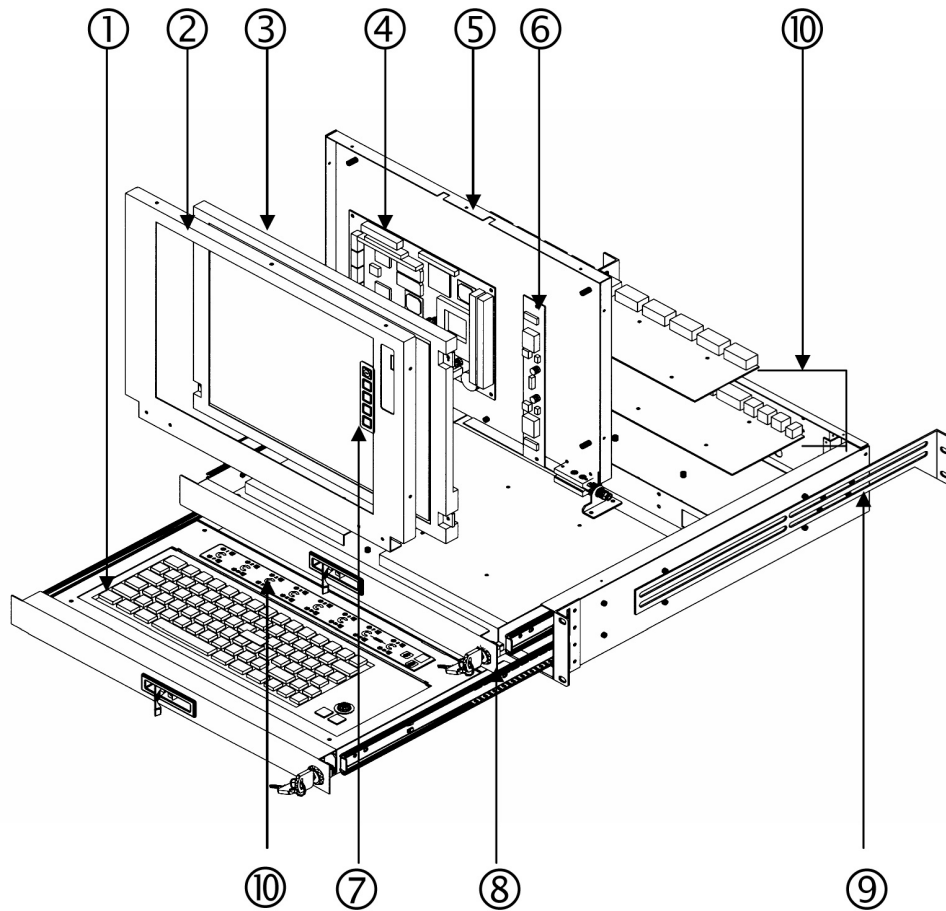


10. Dimensions Diagram

NVP2415-S8/1601 1U 15" LCD Keyboard Drawer with USB KVM

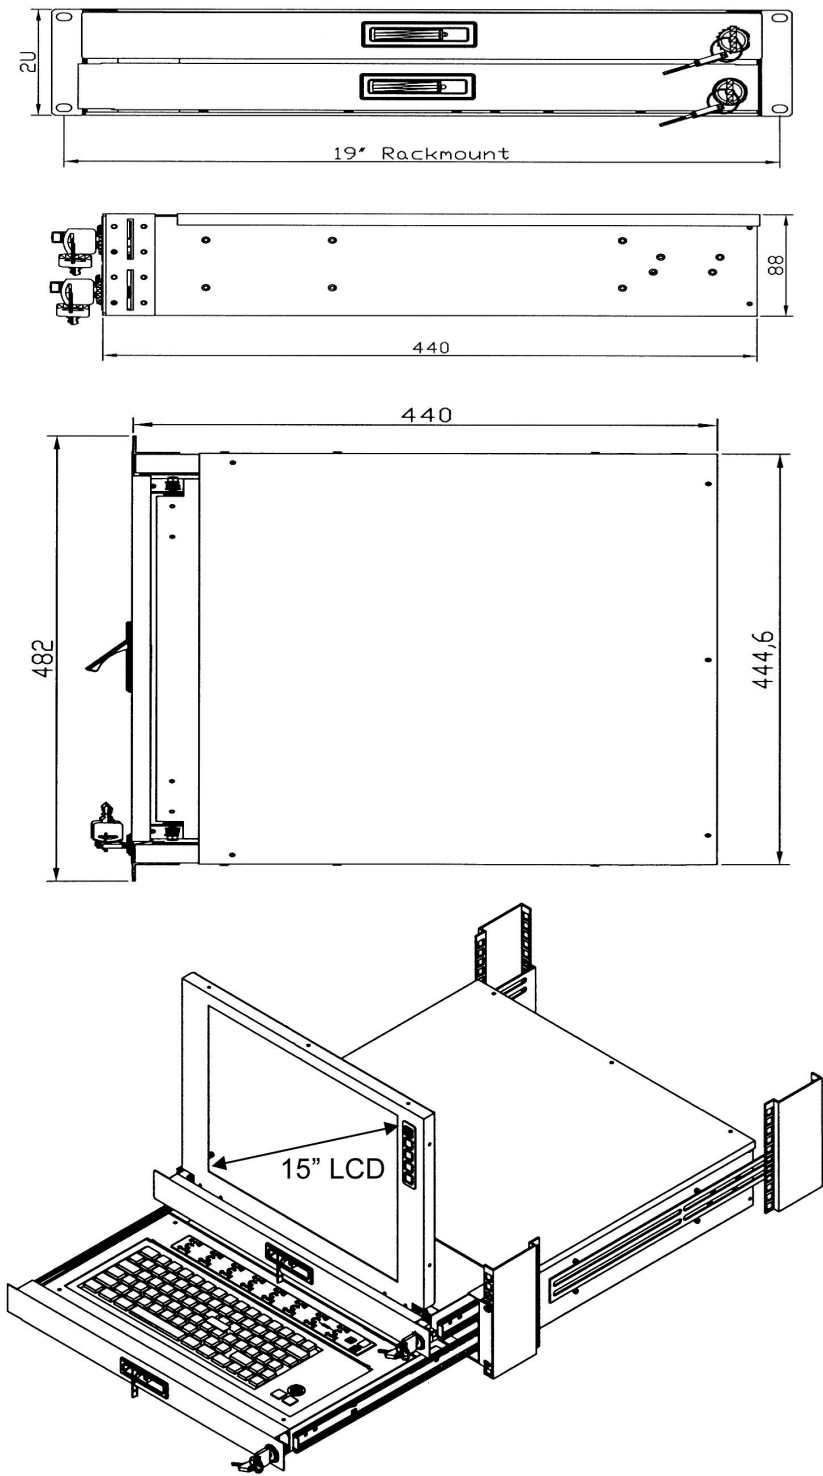


10. Dimensions Diagram

NVP2417-S8/1601 1U 17" LCD Keyboard Drawer with USB KVM

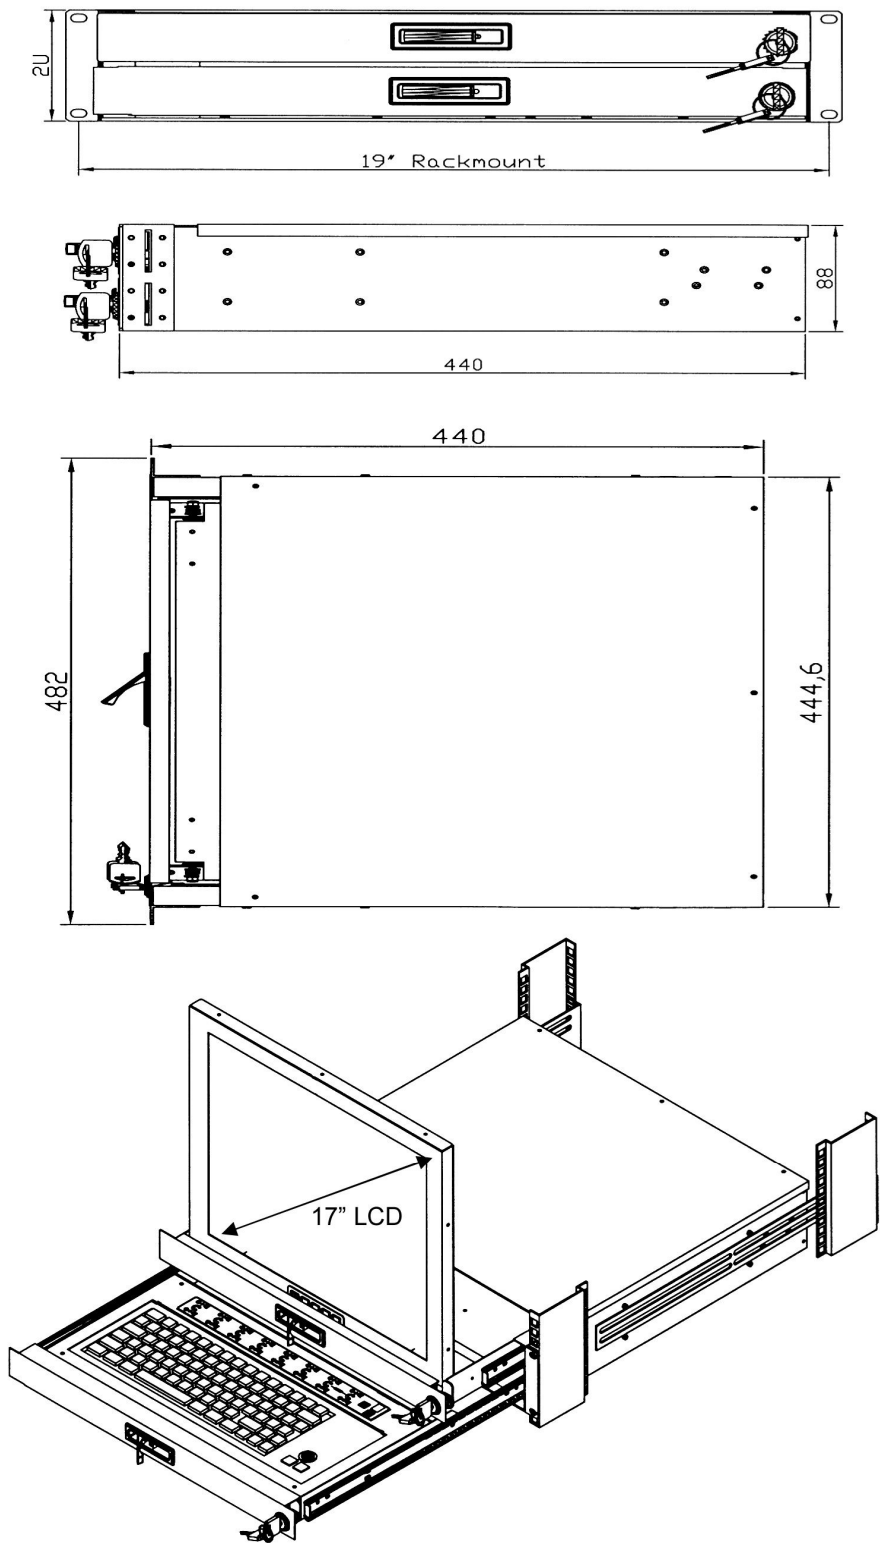

10. Dimensions Diagram

NVP2419-S8/1601 1U 19" LCD Keyboard Drawer with USB KVM

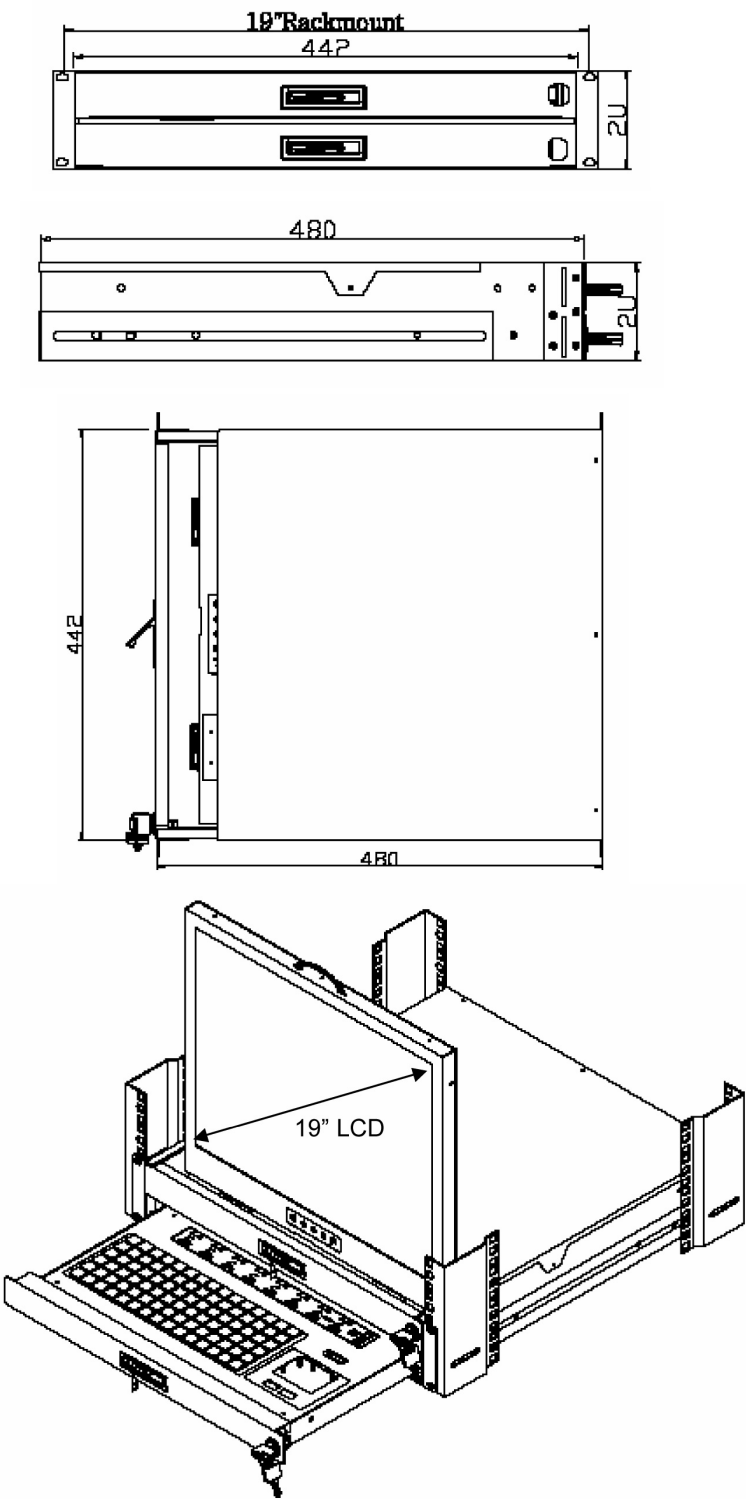


LCD

Session

11. LCD Session

LCD Membrane diagram

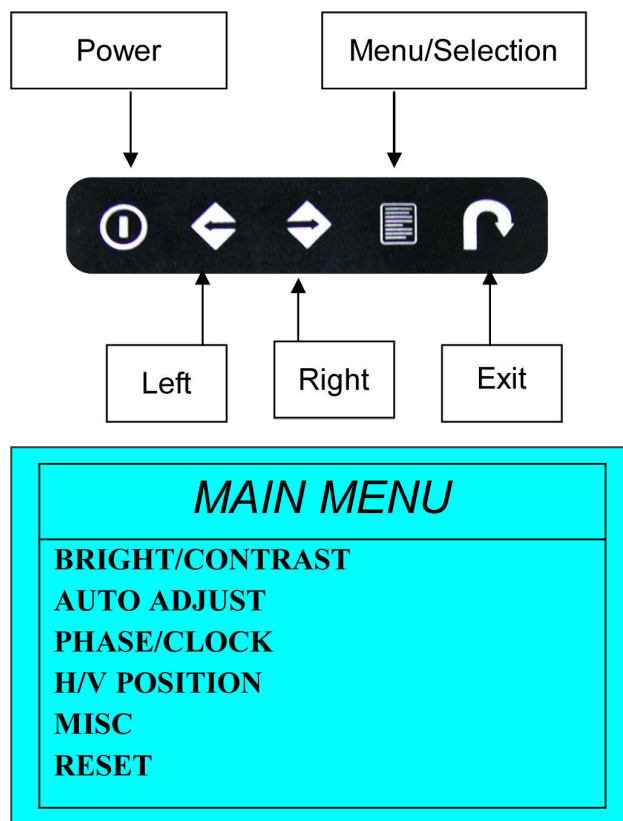

Main Menu

Bright / Contrast

- To enter into the Bright, Black level & Contrast sub-menu

Auto Adjust

- To perform automatic optimisations of all functions
- An " Adjusting" message is displayed during the process

Phase / Clock

- To enter into the phase & clock sub menu

H/V Position

- To enter into the H/VPosition sub-menu

MISC

- To enter into the MISC sub-menu

Reset

- Reset to the default factory settings

11. LCD Session

Bright / Contrast

1. Brightness

- To perform brightness adjustment of the input RGB signal
- Use the Left & Right button to adjust and button  to "Brightness"

2. Contrast

- To adjust the contrast level of the input signal
- Use the Left & Right button to adjust and button  to "Contrast"

Phase / Clock

1. Phase

- To adjust input video sampling clock's phase
- Use the Left & Right button to adjust and button  to "Phase"

2. Clock

- To adjust input video sampling clock
- Use the Left & Right button to adjust and button  to "Clock"

H/V Position

1. H.Position

- To adjust the horizontal size of the frame
- Use the Left & Right button to adjust and button  to "H.position".

2. V.Position

- To adjust the vertical position of the frame
- Use the Left & Right button to adjust and button  to "V.position".

11. LCD Session

MISC

1. Information

- The first header row shows the current resolution setup
- The second header row shows the horizontal frequency of the current input signal
- The third header row shows the vertical frequency of the current input signal

2. OSD Timer

- To modify the duration of the OSD time-out

3. Color

a) 5500K

- Select Colour Temp at 5500K

b) 6500K

- Select Colour Temp at 6500K

c) 9500K

- Select Colour Temp at 9500K

d) User

- Change Colour Temp by manual

4. Language

- To select the language of OSD menu 7 Languages :
 - (1) English
 - (2) Japanese (日本語)
 - (3) Chinese (中文)
 - (4) German
 - (5) Francais
 - (6) Espanol
 - (7) Italiano

11. LCD Session

Resolutions Settings


For Microsoft Windows

Step 1 – Press right click on the desktop


Step 2 – Choose “Properties”



Step 3 – Change the “Screen Resolution”

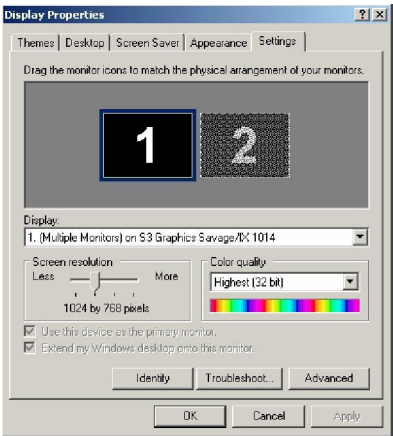

Step 4 – Change the “Screen refresh rate”

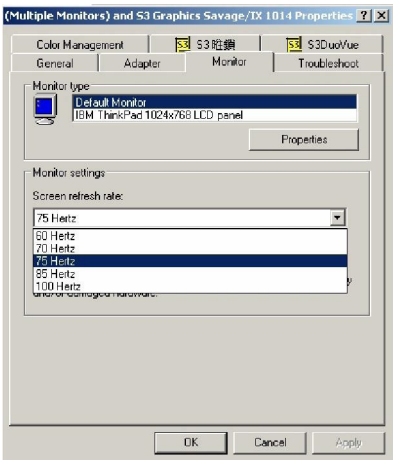


KVM

Session

12. KVM Session

Front View

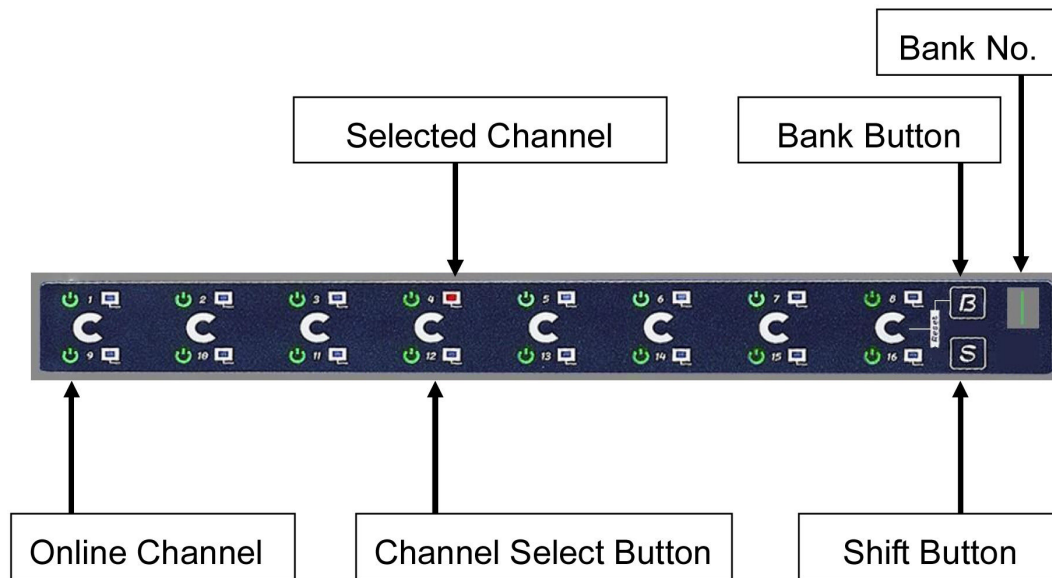

LED Indication

Selected Channel - Displayed channel on monitor & red in LED.

Channel select button - Press to select channel from 1 – 8.

Shift button - Press & Hold follow with a channel button to select channel from 9 – 16.


Online Channel - Green LED state the PC has connected and power on.

Bank no. - Display the Bank no. from 1 – 8.

Bank button - Select the bank from 1 – 8 (for cascade only).

12. KVM Session

Rear View

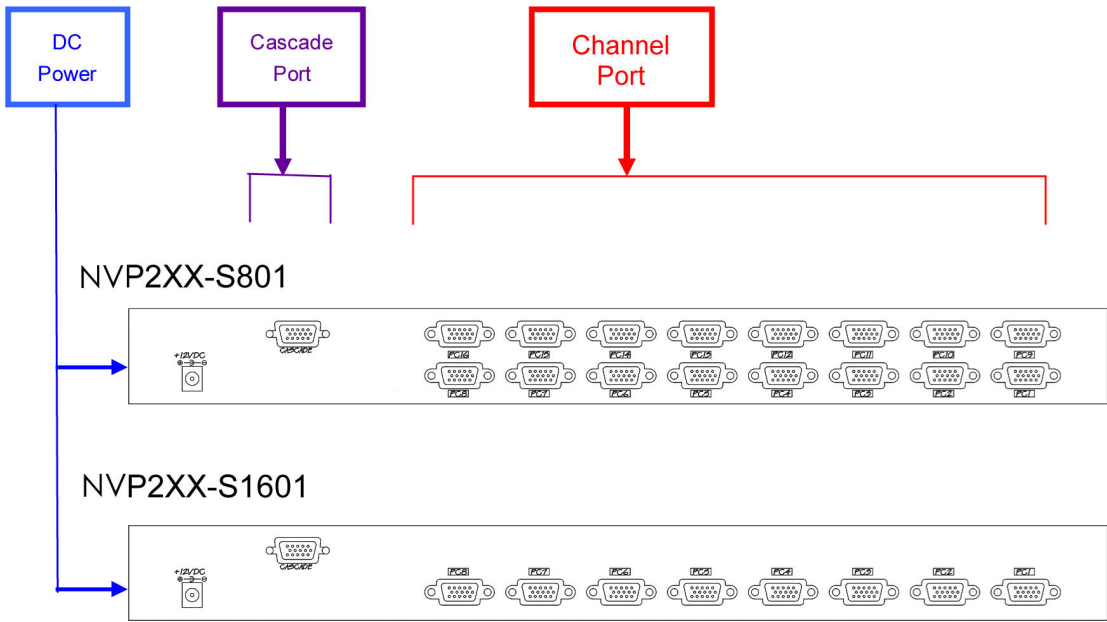

DC Power -connect to external 12V DC power adapter.

Cascade Port -connect to additional KVM switch for channel expansion.

Console Port -connect to monitor, PS/2 keyboard & mouse.


Channel Port -connect to PC computer with NB-6 2-in-1 KVM cable.

12. KVM Session


Installation Steps

Before installation, please make sure all computers are turned on and its operating system are running properly with keyboard and mouse.


- 1. Connect the 2-in-1KVM cable to the one of your server.
 - USB Type A Male connector to the USB Port
 - HDDB 15-pin Male connector to the VGA Port

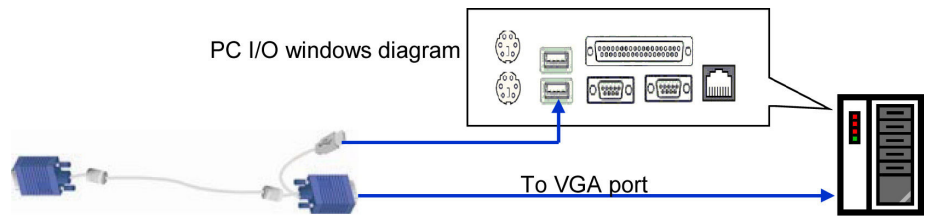

- 2. Plug the power adapter included to the switch.



- 3. Connect the another end of the 2-in-1 cable to the USB KVM switch

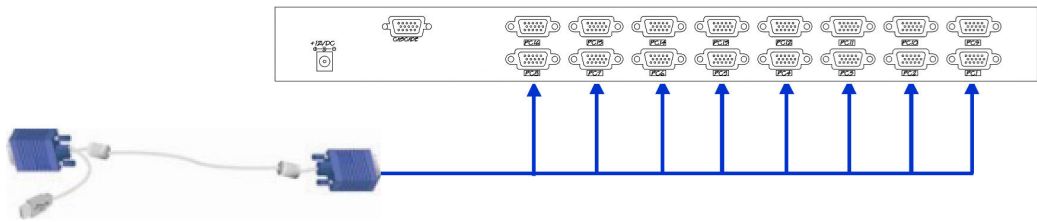


- 4. Reset USB KVM Switch by membrane

12. KVM Session

Cascading


Using USB KVM cable to connect from Bank 1's "Cascade port" to Bank 2's "Console port". After connected please press "Bank" & "Channel" button on the front of the USB KVM switch to reset the USB KVM switch.

Bank 1




USB Cascade cable

Bank 2



USB Cascade cable

Bank 8 (Max.)



Cascade level Max. : 8 level

- Max. PC connection is 128 or with additional 122 PCs.
- All USB KVM switch is compatible & can cascade with each other.
- Using USB cascade cable to cascade.
- Normal distance from one USB KVM to another is 15 feet.

13. Start Up

1. The channels that have PC connected and it is switch on will have a green LED on that channel.
2. The red LED will indicate the selected channel.
3. 7 segments LED will display the bank number.
4. Press channel button to select the channel.
5. Enter the password, default is "00000000" eight zeros.
6. Otherwise the keyboard & mouse will be locked.
7. If you forget your password, send back to Manufacturer.


HotKey Command

- Simple key sequence.
- Press " Scroll Lock" twice within 2 seconds.
- Follow with a beep sound, going into the hot key mode.
- Need to key in the hot key within 2 seconds.
- Go back to Operation System Control state.


13. Start Up

Hot-key Command Operation


1. Calling OSD Menu




2. Switch to Previous Port (powered on PC only)



3. Switch to Next Power On Port (powered on PC only)



4. Switch to Previous Bank




First digit of Port Number:

0 for Port 0-9
1 for Port 10-16


Second digit of
port Number

5. Switch to Specific Port




Example

a) Bank 1 Port 4




a) Bank 2 Port 16




13. Start Up

Hot-key Command Operation

6. Switch to Next Bank




7. Enable / Disable beeper sound




Note: The default Beeper function is ON and beeper control is only for available for Scan Mode.

8. Auto Scan for Powered on PC




9. Reset to factory Default Setting



ROM REFLASH

Note: Not available for password reset.

10. Reset to factory Default Setting



FIND:

Note: When the above dialogue appear, type the PC name and the OSD Menu will search PC name starting from 1st powered on PC port.

13. Start Up

KVM OSD Operation

Note: When using the keyboard arrow key to move the cursor, the keypad arrow key (Up, Down, Right, Left) is unable to work at this menu.

- 1. "MAIN CONTROLS" - OSD Menu of USB KVM switch
 - To pop up MAIN CONTROLS—OSD menu of USB KVM switch, please use hot keys command .
 - To operate MAIN CONTROLS, please use keyboard and mouse.
 - **Mouse Operating:** You may also simply use mouse, twice clicking left button, to choose a category. Clicking "?" will bring up **HELP** window and click "X" for exiting.
 - **Keyboard Operating:** In MAIN CONTROLS window, use the Up "↑" or the Down "↓" Key to select a category and press "Enter" Key to get into designated option. Pressing "**F1**" Key brings up **HELP** window and **Esc** key to exit.
 - To enter the sub menu e.g. LANGUAGE or PORTNAME, please use keyboard or mouse to move the highlight bar cursor.
 - When you reach the sub menu you want to activate press "Enter" or double click the highlight bar cursor.

MAIN CONTROLS	?X
ENTER A CHOICE :	
01 LANGUAGE	
02 PORTNAME	
03 TIMEVIEW	
04 SECURITY	
05 FINDPORT	
06 PASSWORD	
07 CONSOLE	

13. Start Up

LANGUAGE Menu



Mouse Operation :

- Move mouse and click the left button to choose a language, and click left key again to save.

Keyboard Operation:

- Press ↑ / ↓ to choose a language and press ENTER to save.

13. Start Up

PORTNAME Menu

PORTNAME?X

Bank1

01SYSTEM 01▲

02☀SYSTEM 02

03☀SYSTEM 03

04☀SYSTEM 04

05☀SYSTEM 05

06☀SYSTEM 06

07☀SYSTEM 07

08☀SYSTEM 08

09SYSTEM 09•

Bank Session

PC Name Session

Use "Tab" key to select session like Bank, PC, OSD, SCAN, CHANGE PASSWORD, CONSOLE ON/OFF, etc...

Bank Session

Use Page Up & Page Down to switch previous or next bank

PC Name Session

1. "☀" next to the PC name represents the PC system is powered on

Mouse Operation :

- 1. Click the arrow key "▲" or down arrow key "▼" to scroll upward or downward of the PC name list.
- 2. Right click the highlighted PC name for editing PC

Keyboard Operation:


- 1. Use up key "▲" or the down key "▼" from the keyboard to select port for destination PC name
- 2. Press "Ins" key or for editing PC name

Note: PC name should not be more than 8 characters.

3. When editing is finished press "Enter".

13. Start Up

TIMEVIEW Menu

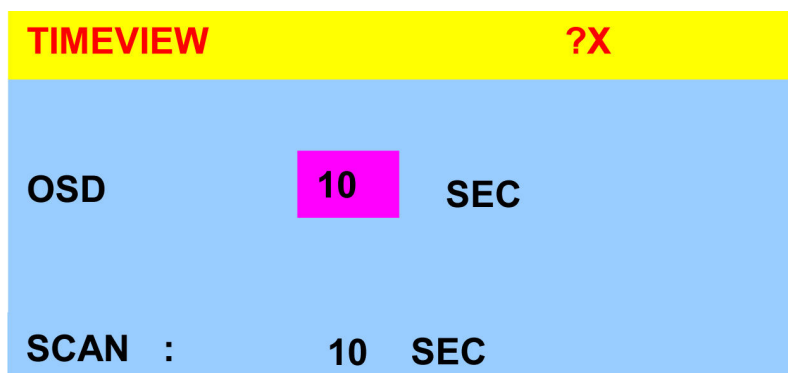

1. OSD TIME means the display period of OSD windows or PC system name on your monitor. You can modify it from 05 sec to 99 sec. The factory default value is 10 sec...

2. SCAN TIME means the scan interval from one PC port to next PC port. The default SCAN time is 10 sec and the maximum scan time is 99 sec.

Mouse Operation :

Click the right button of mouse to select and modify OSD and SCAN TIME

Keyboard Operation:

Use key "↑" and "↓" key or press the "INS" key to select and modify OSD and SCAN TIME

13. Start Up

SECURITY Menu

SECURITY	?X
ENTER PASSWORD	

ENTER NEW PASSWORD	

RETYPE NEW PASSWORD	

- To **CHANGE PASSWORD** for avoiding all PC systems to be intruded by the others. The default password is 8 digits " 00000000 ".
- Please follow the steps below to change the password.

1. Enter the factory default password "00000000" in the first row "ENTER PASSWORD" and press the "Enter".

ENTER PASSWORD
●●●●●●●●

2. Enter your new password in the second row "ENTER NEW PASWORD" and press the "Enter".

ENTER NEW PASSWORD
●●●●●●●●

3. Retype the new password in last row "RETYPE NEW PASSWORD" and press the "Enter" for confirmation

RETYPE NEW PASSWORD
●●●●●●●●

Note: The OSD menu will return back to MAIN CONTROLS if the retyped password matched with the new password

13. Start Up

FINDPORT Menu

FINDPORT	?X
ENTER NAME : _ _ _ _ _	

“FINDPORT” option helps you to find the PC system by its name.

- Enter PC system name and press ENTER, it will search the matching PC system and given the message for searching result..

Note: PC system name is defined in PORTNAME function.

Example :

a) If you enter a PC name which can be found on the system, the window will show the PC system name you searched and which BANK it belongs to.

Note: Enter wild card “*” and combine the other characters from A~Z and 0~9 to search all of system name lists matched the same format .

FINDPORT	?X
BANK : 1	
01	SYSTEM 01

b) If there is no match PC system name were found, the window will show“PORTNAME NO FOUND!” message displayed.

FINDPORT	?X
BANK : 1	
PORTNAME NO FOUND !	

Note: To use “ PgUp “ key or “ PgDn” for searching at the previous or next Bank.

13. Start Up


CONSOLE Menu



- ENABLE – any user can use the console
- DISABLE – user is not allowed to use the console port, unless password is entered. When password is entered already and pass the KVM switch authentication, the CONSOLE will be set to ENABLE.
- Default – ENABLE no password is required

Note: After finish the usage of KVM switch, please don't forget to set up CONSOLE ENABLE state to DISABLE state.

HELP Menu

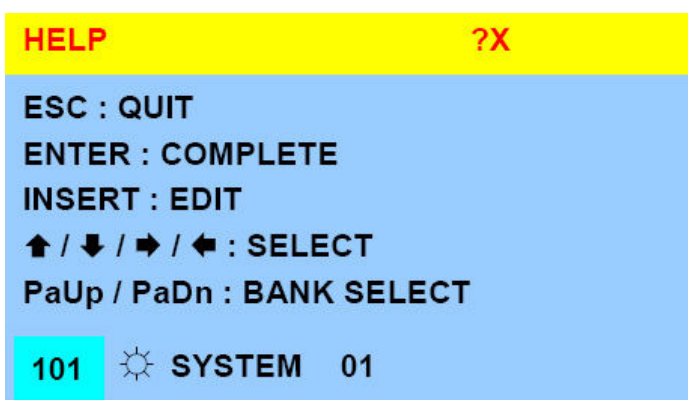

- To call the HELP menu, please click the “?” at the right corner of the OSD
- To operate the options in HELP menu by using Esc, Enter, Ins, arrows, and Page Up / Page Down keys on keyboard.

14. FAQ

1. Keyboard or mouse dose not work or not be compatible with the PC. Please make sure the keyboard or mouse works when directly plug into the computer. If the problem persists, please try another keyboard or mouse.
2. Mouse doesn't work in Auto Scan mode You can press any key on the keyboard or the front button on the face plate for returning standard mode and then use the Keyboard or Mouse again.

15. Technical Specification

KVM

Item	Specification
KVM Channel Port	NVP241X-S801: 8 port / NVP241X-S1601: 16 port
KVM Channel Interface	HDDB 15 pin
PC Computer Interface	USB Port : Type A Female VGA : HDDB 15pin Female
Cascade Port Connector	HDDB 15pin Female
KVM Cable Connection	2-in-1 HDDB 15-pin KVM Cable (NB-6/ 10/ 15)
PC selection	On Screen Display, Hot Key & Push Button
LED	1 Bank LED 8 / 16 Online LED (Green) & Selected LED (Red)
On Screen Display Control	Yes
Scan Mode Intervals	5~99 Sec.
VGA Resolution	1,920 x 1,440
Bandwidth	200MHz
Cascade MAX. Level	8 levels with addition 120 / 128 PCs connection
Housing	Metal
Power Adapter	DC 12V 1A
Operation Temperature	0~40°C
Storage Temperature	-20 ~ 60°C

15. Technical Specification

LCD

Item	Specification		
LCD Screen Manufacturer			
LCD Origin	South Korea		
Panel	15" TFT	17" TFT	19" TFT
Resolution	1,024 x 768	1,280 x 1,024	1,280 x 1,024
Brightness	300 cd/m2	350 cd/m2	500 cd/m2
Color	16.2 Million	16.2 Million	16.7 Million
Contrast Ratio	450:1	350:1	500:1
Viewing Angle	140° x 125°	140° x 130°	170° x 170°
Display Area	304 x 228 mm	337 x 270 mm	376 x 301 mm
Pixel Pitch	0.297 mm	0.264 mm	0.294 mm
Response Time (Tr)	5ms		15ms
Response Time (Tf)	20ms		10ms
Back Light	4 x Cold Cathode Fluorescent Tube		
Horizontal Sync.	48.4 kHz	64 ~ 80 kHz	64 kHz
Vertical Sync.	65 MHz	60 ~ 75 Hz	60 Hz
Input Signal	Analog RGB 0.7Vp-p		
Power Management	VESA DPMS		
OSD Control	Brightness, Contract, Colour, Clock		
	H.Position, V.Position, Phase, Scaling		
	Auto Config., Input Select, Multi-Window		
	Clear EEPROM, OSD adjust		
Power Input	12V DC Adapter		
Video Input	15-pin D-Sub Connector		
Dimension	NVP2415-S8/1601 : 439W x 88H x 440D mm NVP2417-S8/1601 : 439W x 88H x 440D mm NVP2419-S8/1601 : 442W x 88H x 480D mm		
Weight	NVP2415-S8/S1601 : 12.5kg NVP2417-S8/S1601 : 13.5kg NVP2419-S8/S1601 : 14.5kg		

*All brand names, logo registered trademarks are properties of their respective owners.